

# **GUARDALL SAFE AND LOCK**

TEL. 1300 1 SAFES (1300 1 72337)

## **ELECTRONIC CW LOCK OPERATING INSTRUCTION**

### **1. TO OPEN THE SAFE**

The electronic lock fitted to your safe has a factory setting of

\*123#

Type this sequence in to open your safe.

### **2. TO CHANGE COMBINATION CODE**

#### **ALWAYS CHANGE COMBINATION WITH DOOR OPEN**

Open the door of your safe and push the button which is on the inside of the safe door. Enter your new number (between 3 and 8 digits) ending with the #. This must be done within 10 seconds.

**Do not close the door until you have checked that the new code you have entered is working.**

Example: Push the inside button (beep and green light goes on)  
Enter new code 12345678# (acceptance tone will sound)  
Your new code has been set.  
With the door open, lock the bolt work in the closed position.  
Press # to lock the bolts. (the safe is now locked, but with the door open).  
Press\*12345678# and the lock should open.  
If this happens you have changed the code correctly.

### **3. TO CHANGE BATTERIES WHEN LOW**

Rotate keypad in an anti-clockwise direction to unclip and hold in your hand. This will reveal 4 x AA size batteries. Replace all 4 at one time using alkaline batteries, we recommend Energizer alkaline batteries. Turn and clip keypad back on and it will resort to normal function.

**Note: Always have safe door in the open position when following the code changing procedure. Always double check the new code before locking the safe door.**