

GUARDALL SAFE AND LOCK

TEL. 1300 1 SAFES (1300 1 72337)

ELECTRONIC CW LOCK OPERATING INSTRUCTION

1. TO OPEN THE SAFE

The electronic lock fitted to your safe has a factory setting of
*123#

Type this sequence in to open your safe.

2. TO CHANGE COMBINATION CODE

ALWAYS CHANGE COMBINATION WITH DOOR OPEN

Open the door of your safe and push the button which is on the inside of the safe door. Enter your new number (between 3 and 8 digits) ending with the #. This must be done within 10 seconds.

Do not close the door until you have checked that the new code you have entered is working.

Example: Push the inside button (beep and green light goes on)
Enter new code 12345678# (acceptance tone will sound)
Your new code has been set.
With the door open, lock the bolt work in the closed position.
Press # to lock the bolts. (the safe is now locked, but with the door open).
Press*12345678# and the lock should open.
If this happens you have changed the code correctly.

3. TO CHANGE BATTERIES WHEN LOW

Rotate keypad in an anti-clockwise direction to unclip and hold in your hand. This will reveal 4 x AA size batteries. Replace all 4 at one time using alkaline batteries, we recommend Energizer alkaline batteries. Turn and clip keypad back on and it will resort to normal function.

Note: Always have safe door in the open position when following the code changing procedure. Always double check the new code before locking the safe door.