# **GUARDALL SAFE AND LOCK**

TEL. 1300 1 SAFES (1300 1 72337)

# LA GARD

# **Lock Instructions**

## STANDARD FEATURES

#### WRONG TRY PENALTY


• Four (4) consecutive invalid codes initiates five minute delay period.

#### LOW BATTERY WARNING

• Repeated audio and visual signal (LED flashing and repeated beeping) during opening indicates low battery.

#### AUDIO AND VISUAL SIGNAL

- Double signal (LED flashes and unit beeps) indicates entry is valid or accepted.
- Triple signal indicates invalid or not accepted.

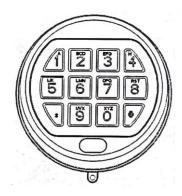

## **OPENING THE LOCK**

(factory set to 1 2 3 4 5 6)

- 1). Enter valid six (6) digit code.
- 2). The lock will indicate a valid code entry with a double signal.
- 3). Within four (4) seconds, turn handle to the open position.
- 4). Pull door open.
  - Invalid code entry Lock will signal three (3) times.

# **CHANGING YOUR CODE**

### ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN

 
- 1). Enter "zero" six times.
- 2). Enter your existing six (6) digit code one time. (factory set to 1 2 3 4 5 6)
- 3). Enter your NEW six (6) digit code two times.
- 4). If a mistake is made wait thirty (30) seconds and repeat steps 1-3
- 5). Test lock operation several times before closing the door.

**VALID CODE ENTRY** – Double signal after valid six (6) digit Code is entered.

INVALID CODE ENTRY – Triple signal and old code is still valid.

## **CHANGING YOUR BATTERY**

- 1). Slide the keypad housing up and carefully pull away from the front of the safe CAUTION: Do not over stretch the wire this could cause damage!
- 2). Remove the 9v ENERGISER<sup>TM</sup> ALKALINE battery and replace with a new one. The connector is easily unclipped from the battery and reconnected.
- 3). Carefully position the keypad back onto the mounting pegs, ensuring you do not crush the wire and slide firmly back into position.



To arrange to have your safe serviced please call us to arrange a time to suit you.

