

# GUARDALL SAFE AND LOCK

TEL. 1300 1 SAFES (1300 1 72337)

## LA GARD 3750

### Lock Instructions

#### STANDARD FEATURES

##### WRONG TRY PENALTY

- Four (4) consecutive invalid codes initiates five minute delay period. LED flashes red at ten (10) second intervals

##### LOW BATTERY WARNING


- Repeated audio and visual signal (LED flashing and repeated beeping) during opening indicates low battery.

##### AUDIO AND VISUAL SIGNAL

- Double signal (LED flashes and unit beeps) indicates entry is valid or accepted.
- Triple signal indicates invalid or not accepted.

#### OPENING THE LOCK (factory set to 1 2 3 4 5 6)

- 1). Enter valid six (6) digit code.
- 2). The lock will indicate a valid code entry with a double signal.
- 3). Within four (4) seconds, turn the keypad clockwise to the open position.
- 4). Pull door open.
  - Invalid code entry – Lock will signal three (3) times.

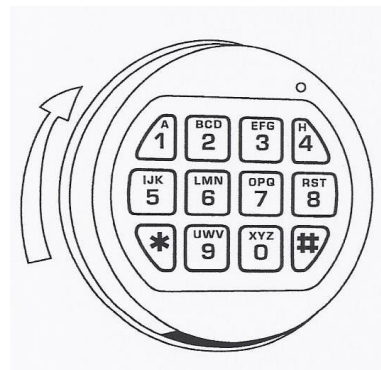

#### CHANGING YOUR CODE

##### ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN


- 1). Enter “zero” six times.
- 2). Enter your existing six (6) digit code one time. (factory set to 1 2 3 4 5 6)
- 3). Enter your NEW six (6) digit code two times.
- 4). If a mistake is made wait thirty (30) seconds and repeat steps 1 – 3
- 5). Test lock operation several times before closing the door.

**VALID CODE ENTRY** – Double signal after valid six (6) digit Code is entered.

**INVALID CODE ENTRY** – Triple signal and old code is still valid.

#### CHANGING YOUR BATTERY

- 1). Remove black plastic battery compartment cover (located at bottom of the keypad)
- 2). Allow the battery and its leads to drop down and out of the battery compartment. If it does not drop gently pull on the battery until it drops out.
- 3). Remove the 9v ENERGISER™ ALKALINE battery and replace with a new one. The connector is easily unclipped from the battery and reconnected.  
**CAUTION:** Do not over stretch the wire this could cause damage!
- 4). Gently push the battery and the leads completely into the battery compartment and carefully refit the battery compartment cover.

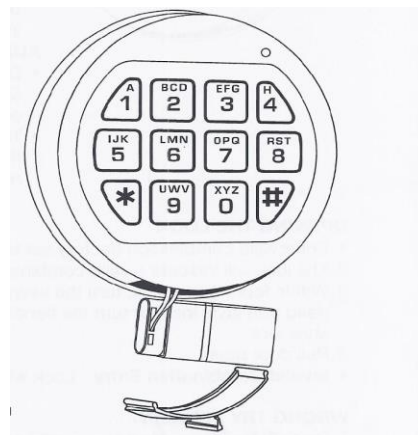

**We recommend that your safe is serviced at regular intervals, 12-18 months would be the optimum period if the safe is used daily. Failure to service your safe may eventuate in an expensive breakdown, to avoid this please have your safe checked. To arrange to have your safe serviced please call us to arrange a time to suit you.**